




Cleaning Rosin Flux

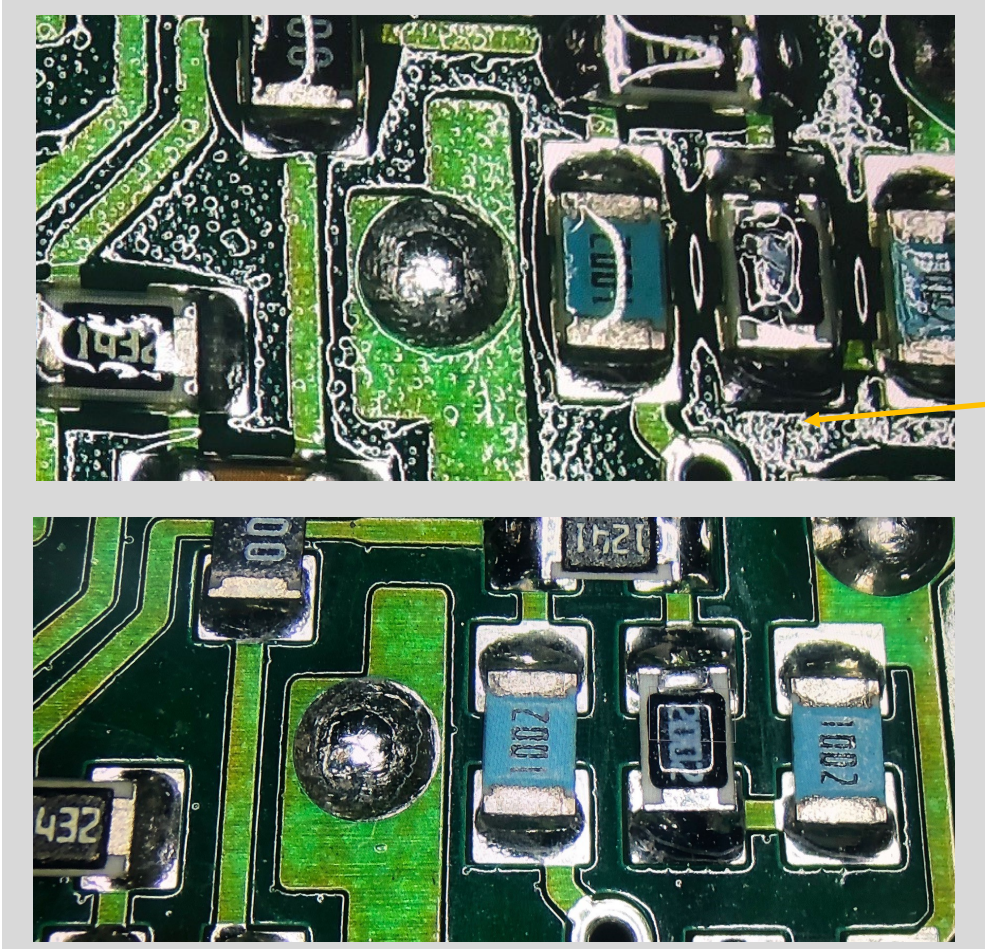

**Before
Immersion**

Rosin Flux

**After
Immersion
Cleaning in
AeroTron-100**

Process Steps:

- 3 min immersion in AeroTron-100 solvent
- 1 min. multi-dip (in and out of solvent bath)
- Dry in cool zone 30 sec.

Manufactured in the USA by:



©Reliance Specialty Products, Inc. 2011-2021